

AMTRUX

AMT200101 AMTRUX Polished SS Nudge Bar with DBL Row Light Bar

CHEV 1500 (2019-2025)

CONTENTS	TOOLS NEEDED

TIME	DIFFICULTY
HOURS	

FAILURE TO INSTALL THIS PRODUCT AS SPECIFIED IN THE INSTALLATION PROCEDURE WILL VOID ALL WARRANTY. IF ANY PARTS HAVE ARRIVED DAMAGED OR WERE NOT SUPPLIED, PLEASE TAKE PHOTOS AND CONTACT YOUR SUPPLIER.

Step 1

A) Start installation from under the front of the vehicle. Determine if the vehicle is equipped with tow hooks.

IMPORTANT NOTE

TOW HOOKS CANNOT BE REINSTALLED WITH THE BULL BAR.

B) > **Tow Hook equipped vehicles:**

A. Remove the factory tow hook from the end of each frame channel, (Figures 1–3).

C) Select the passenger/right Mounting Bracket. Insert the bracket through the opening in the bumper and up to the frame. Trim the plastic as required to clear the bracket, (Figure 5). Repeat to check for clearance on driver/left side of bumper.

D) Proceed to Step 2.

E) **Vehicles without tow hooks:**

A. Cut out the indented area in both sides of the plastic bumper insert to clear the brackets as pictured, (Figures 4 & 5).

IMPORTANT NOTE

IMPORTANT: MAKE SEVERAL SMALL CUTS FOR BEST FIT.

F) Check for clearance between brackets and opening and trim the plastic as required to clear the brackets.



(Fig 1) Example of Tow hook




(Fig 2) Passenger/right inner mounting bolt for tow hook pictured from behind bumper




(Fig 3) Passenger/right outer mounting bolts for tow hook pictured from behind bumper

Area to cut out illustrated for example only

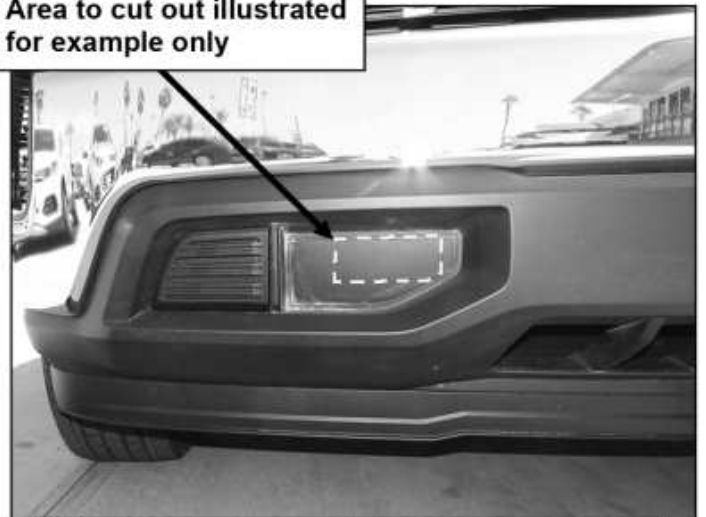

(Fig 4) Example of model without tow hooks

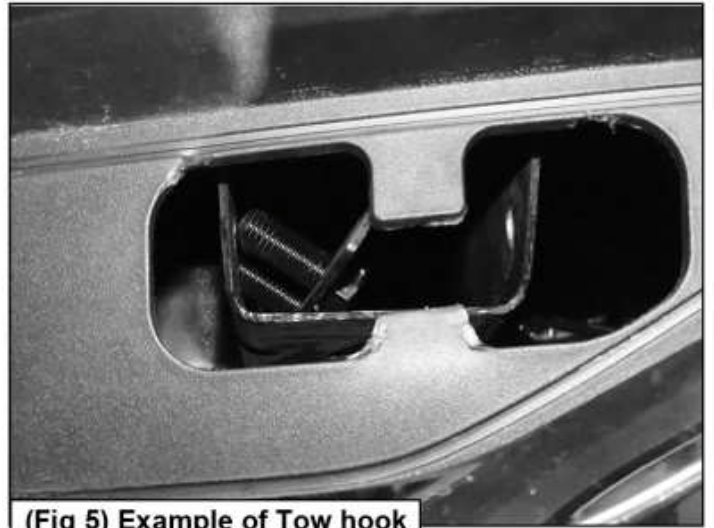

(Fig 5) Example of Tow hook

Step 2


A) Line up the holes in the bracket with the holes in the end of the frame channel for the tow hook, (Figure 5).

B) Select (1) 12mm Double Bolt Plate, (Figure 6).

C) Insert the bolt plate into the end of the frame and out through the (2) holes in the side of the frame and out through the bracket, (Figures 6 & 8).

D) Secure the bracket to the bolt plate with (2) 12mm Flat Washers and (2) 12mm Nylon Lock Nuts.


E) Leave hardware loose at this time.

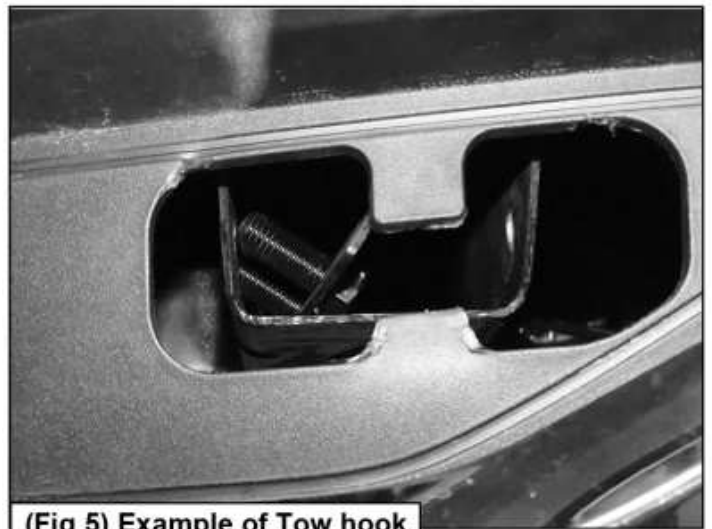

(Fig 5) Example of Tow hook

(1) 12mm Double Bolt Plate
(2) 12mm Flat Washers
(2) 12mm Nylon Lock Nuts

(1) 12mm Single Bolt Plate
(1) 12mm Flat Washer
(1) 12mm Nylon Lock Nut

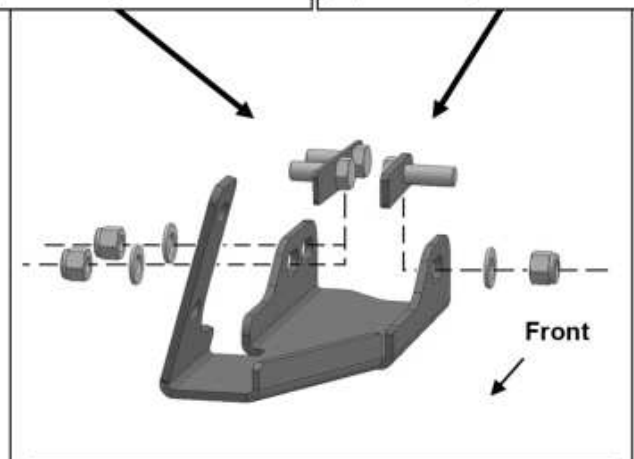

(Fig 6) Passenger/right side Bracket illustrated

12mm Double Bolt Plate
(2) 12mm Flat Washers
(2) 12mm Nylon Lock Nuts



Fig 7

(1) 12mm Double Bolt Plate
(2) 12mm Flat Washers
(2) 12mm Nylon Lock Nuts



(Fig 8) Outer passenger/right side Bracket with Double Bolt Plate pictured from behind bumper


Step 3

Repeat Step 2 to install the 12mm x 35mm Single Bolt Plate, (Figure 9), into the single forward tow hook mounting hole in the other side of the frame channel and Bracket, (Figures 6, 10 & 11).

12mm Single Bolt Plate
12mm Flat Washer
12mm Nylon Lock Nut



Fig 9

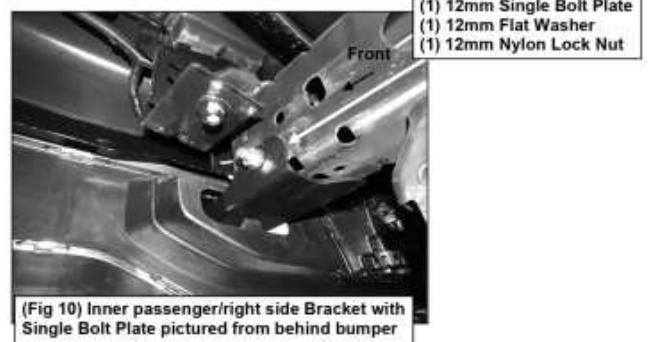

(1) 12mm Single Bolt Plate
(1) 12mm Flat Washer
(1) 12mm Nylon Lock Nut

(Fig 10) Inner passenger/right side Bracket with Single Bolt Plate pictured from behind bumper



(Fig 11) Passenger/right side Bracket installed


Step 4

Repeat Steps 2 & 3 to install the driver/left Mounting Bracket.

Step 5

With assistance, hold the bull bar up in position on the outside of the mounting brackets. Attach the bull bar to the brackets with (4) 10mm x 30mm Hex Bolts, (8) 10mm Flat Washers and (4) 10mm Nylon Lock Nuts, (Figures 12 & 13). Do not tighten hardware at this time.

(2) 10mm Hex Bolts
(4) 10mm Flat Washers
(2) 10mm Nylon Lock Nuts

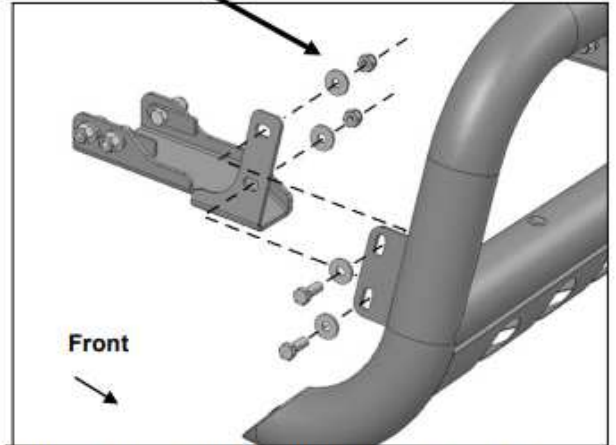

(Fig 12) Attach Bull Bar to outside of Brackets. Passenger/right side complete installation

(2) 10mm x 30mm Hex Bolts
(4) 10mm Flat Washers
(2) 10mm Nylon Lock Nuts



(Fig 13) Passenger/right side complete installation

Step 6

Check the bull bar alignment with the vehicle and for clearance between the bull bar and the bumper. Adjust as required then fully tighten all hardware at this time.

To protect your investment, wax this product after installing. Regular waxing is recommended to add a protective layer over the finish. Do not use any type of polish or wax that may contain abrasives that could damage the finish.

For stainless steel: Aluminum polish may be used to polish small scratches and scuffs on the finish. Mild soap may be used also to clean the Bull Bar.

For gloss black finishes: Mild soap may be used to clean the Bull Bar.